

-1-



HAMMERLI® X2™ OPERATION MANUAL

Dual Caliber Spring Operated Break-Barrel

Hammerli Model	Caliber	Velocity	Danger Distance
X2	.177 / .22	1100 / 900 fps	600 yds

Shoots Lead Pellets

Read this owner's operation manual completely.

This airgun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

Hammerli Air Rifles are recommended for persons that are at least 16 years of age. Adult supervision is required.

⚠ WARNING: THIS AIRGUN IS RECOMMENDED FOR ADULT USE ONLY. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 600 YARDS (548 METERS).

THIS IS A HIGH POWERED AIRGUN FOR USE BY PERSONS 16 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING USE AND OWNERSHIP OF AIRGUNS.

⚠ WARNING: THIS GUN CAN CAUSE SERIOUS INJURY OR DEATH. READ AND FOLLOW THE INSTRUCTIONS CAREFULLY. DO NOT LOAD A PELLET INTO THE GUN UNTIL YOU ARE READY TO SHOOT. IF YOU DO LOAD A PELLET AND THEN DECIDE NOT TO SHOOT, REMOVE IT EITHER MANUALLY OR BY SHOOTING THE GUN AT A SAFE TARGET. AN UNLOADED, UNCOCKED GUN IS SAFEST. ACCIDENTS HAPPEN FAST, FATALLY WOUNDING SOMEONE IS A TERRIBLE THING. PLEASE SHOOT SAFELY.

Guns differ in their operation and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following operating instructions thoroughly prior to operating.

-2-

⚠ CAUTION: YOU AND OTHERS WITH YOU SHOULD WEAR SHOOTING GLASSES TO PROTECT YOUR EYES. IF YOU WEAR READING GLASSES, YOU SHOULD WEAR SAFETY GLASSES INTENDED FOR USE OVER NORMAL OPTICAL READING GLASSES.

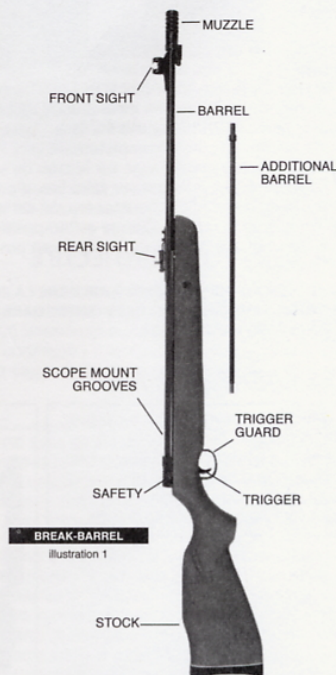


Illustration 1

⚠ WARNING: BE SURE THE GUN IS ALWAYS POINTED IN A SAFE DIRECTION. NEVER POINT THE GUN AT ANY PERSON EVEN IF IT IS UNCOCKED AND UNLOADED. NEVER POINT THE AIR RIFLE AT ANYTHING YOU DO NOT INTEND TO SHOOT. ALWAYS ASSUME AND HANDLE THE GUN AS IF IT WERE LOADED AND READY TO FIRE.

HAMMERLI AIR RIFLE OPERATION STEPS

STEP 1. OPERATING THE SAFETY

The Hammerli X2 has an automatic safety. When the gun is cocked it is automatically put "ON SAFE".

The safety on the Hammerli X2 is located on the top of the receiver (see illustration 2). The safety will be automatically placed in the "ON SAFE" position after the air rifle has been cocked. The safety is not "ON SAFE" unless it is pushed all the way back towards the butt of the stock and the red dot on the safety is not showing. To put the X2 "OFF SAFE", push the safety all the way forward toward the barrel. When you see the red dot on the safety, the air rifle is "OFF SAFE" and can be fired. To manually put the X2 "ON SAFE", push the safety all the way toward the butt of the stock. It is "ON SAFE" when the 'S' is showing and the red dot is not showing.



Illustration 2

⚠ ATTENTION: BEFORE YOU PUT YOUR AIR RIFLE "OFF SAFE", BE ABSOLUTELY CERTAIN THAT YOUR AIR RIFLE IS POINTED IN A SAFE DIRECTION AND THAT YOU ARE READY TO FIRE.

STEP 2. COCKING YOUR AIR RIFLE

⚠ WARNING: WHEN COCKING THE RIFLE DO NOT PLACE YOUR HAND OVER OR IN FRONT OF THE MUZZLE. DON'T ALLOW THE MUZZLE TO POINT TOWARD YOU OR ANYONE ELSE DURING COCKING. ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

With one hand grasp stock firmly behind trigger guard, avoiding contact with the trigger, and brace the butt end of the stock against your thigh. Grasp the barrel near the muzzle end, just behind the front sight. Pull downward and to the rear until it comes to a solid stop. You will hear a click indicating that the spring piston has been locked into position (see illustration 3).

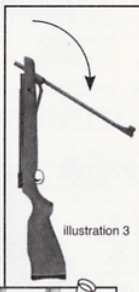


Illustration 3

STEP 3. LOADING YOUR AIR RIFLE

Insert the correct caliber lead pellet carefully into the chamber of the breech end which is exposed when you cock the air rifle (see illustration 4). Be sure to seat the pellet flush with the breech. Avoid damaging the pellet skirt. Be certain to match the caliber pellet with the barrel you are currently using.



Illustration 4

STEP 4. CLOSING THE BARREL

Firmly grasp the barrel behind the front sight, return the barrel to its original closed and latched position.

⚠ WARNING: NEVER CARRY YOUR AIR RIFLE WHILE COCKED AND/OR WHILE LOADED. IT IS BEST TO COCK THE AIR RIFLE ONLY BEFORE SHOOTING. UNDER NO CIRCUMSTANCES SHOULD YOUR AIR RIFLE BE CARRIED COCKED AND LOADED.

⚠ CAUTION: BE CAREFUL TO KEEP FINGERS CLEAR OF COCKING MECHANISM (SEE "PINCH POINTS", ILLUSTRATION 5). GRASP THE BARREL OR LEVER FIRMLY AS YOU COCK IT AND CLOSE IT TO PREVENT IT FROM SNAPPING BACK AND POSSIBLY CAUSING INJURY.



Illustration 5

STEP 5. AIM AT A SAFE TARGET

Always aim your air rifle in a SAFE DIRECTION. Always choose your target carefully. It is best to shoot at a paper bullseye target which is attached to a safe backstop. A heavy blanket should be hung behind the target backstop to prevent ricochet should you miss the backstop. Think about what you will hit if you miss the target.

 


Illustration 6

THE X2 has open sights. Air rifles with this type of sight are correctly aimed when the front sight blade is positioned exactly in the notch of the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight (see illustration 6).

⚠ CAUTION: YOUR BACKSTOP SHOULD BE INSPECTED FOR WEAR BEFORE AND AFTER EACH USE. DISCONTINUE USE IF THE BACKSTOP SURFACE SHOWS SIGNS OF FAILURE. ALWAYS PLACE THE BACKSTOP IN A LOCATION THAT WILL BE SAFE SHOULD THE BACKSTOP FAIL. DISCONTINUE THE USE OF A BACKSTOP IF THE PROJECTILE REBOUNDS OR RICOCHETS.

STEP 6. PUT "OFF SAFE"

When you are absolutely sure your air rifle is aimed at a safe target and you are ready to fire, put your air rifle "OFF SAFE" (see STEP 1. OPERATING THE SAFETY).

STEP 7. FIRING YOUR AIR RIFLE

Squeeze the trigger.

⚠ WARNING: IF A PELLET DOES NOT FIRE AFTER COMPLETING THE OPERATION STEPS, THE GUN MAY BE JAMMED. AN UNFIRED PROJECTILE IN THE BARREL CAN BE A DANGEROUS SITUATION. KEEP GUN POINTED IN A SAFE DIRECTION AND REPEAT ALL OPERATION STEPS EXCEPT STEP 3. IF A PROJECTILE STILL DOES NOT FIRE, DO THE FOLLOWING:

1. Put in "ON SAFE" position (see OPERATING THE SAFETY).
2. Cock the gun and leave the barrel open with the safety in the "ON SAFE" position.
3. Clear barrel by using a cleaning rod (see CARE AND MAINTENANCE).
4. Repeat operation steps.

⚠ CAUTION: DO NOT FIRE WITH THE BARREL OPEN. THIS MAY RESULT IN A BENT BARREL AND/OR CRACKED STOCK AND WILL VOID YOUR WARRANTY.

UNLOADING A PELLET

Fire the pellet at a SAFE TARGET to unload the gun. If this is not practical, put the air rifle "ON SAFE", cock the gun to open the barrel, and push the pellet from the chamber by running a cleaning rod through the breech end. Insert an RWS Cleaning Pellet and discharge into a safe target.

REMOVING A JAMMED PELLET

If a pellet is jammed in the barrel, DO NOT reload the air rifle.

1. Cock the air rifle (see STEP 2. COCKING YOUR AIR RIFLE), point the air rifle in a SAFE DIRECTION, put the air rifle in the "OFF SAFE" position and squeeze the trigger to fire.
2. Break the barrel open slightly (without pulling the barrel all the way down to the point that it cocks) and look down the breech to see if the air rifle is jammed (see illustration 7). NEVER LOOK DOWN THE MUZZLE.
3. If the air rifle is still jammed, insert the correct caliber ramrod into the breech end and push the jammed pellet out of the muzzle. Do not try to reuse that pellet.

If you are not able to unjam your air rifle, contact Umarex USA's Service Department.

⚠ CAUTION: DO NOT ATTEMPT TO REUSE FIRED PELLETS OR PELLETS WHICH ARE DEFORMED. PROJECTILES SUCH AS STEEL SHOT (BBS) AND DARTS MAY DAMAGE YOUR AIR RIFLE AND CAUSE INJURY TO YOURSELF OR BYSTANDERS DUE TO RICOCHETING.

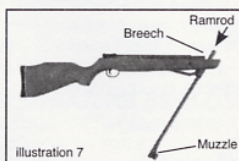


illustration 7


ADJUSTING THE SIGHTS

Elevation adjustment

- If rifle shoots too low pull the slide rearward.
- If rifle shoots too high push the slide forward.

Windage adjustment

- If rifle shoots left loosen windage adjustment screw and pivot sight to the right. Retighten screw.
- If rifle shoots right loosen windage adjustment screw and pivot sight to left. Retighten screw.

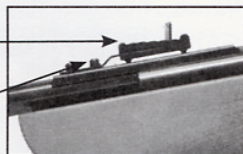

X2 INTERCHANGEABLE BARREL SYSTEM



Before changing barrels:

- Clean the barrel before inserting into rifle.
 - Be sure the interior of the sheath is clean. The presence of strange objects could obstruct the mechanism of the air rifle and even damage it.
1. Pull the pawl toward the butt of the gun until it stops (see illustration 9a).
 2. Twist the muzzlebrake counterclockwise until it comes off.
 3. Remove the barrel from the sheath (see illustration 9b).
 4. Slightly lubricate the outside of the interchangeable barrel with RWS Spring Cylinder Oil before inserting.
 5. Insert the interchangeable barrel (see illustration 9b).
 6. Screw the muzzlebrake back on the threads by twisting it clockwise until snug. Several "clicks" should be heard before the muzzlebrake is firmly in place. Do not over-tighten.

ATTENTION: DO NOT STRIKE OR FORCE THE PAWL. DO NOT REST THE PAWL OR MUZZLE AGAINST ANY SURFACE. THESE ACTIONS COULD DAMAGE THE MECHANISM.

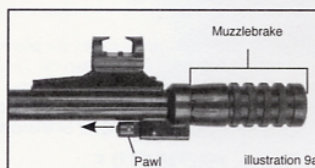


illustration 9a

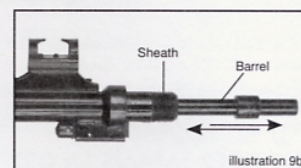


illustration 9b

STORING YOUR AIR RIFLE

NEVER STORE A LOADED OR COCKED GUN. Unload pellet from the gun. Keep air rifle away from children and untrained shooters. Store pellets separately from the air rifle to keep them from untrained shooters. Protect your air rifle from moisture and dirt; clean gun and wrap it in a smooth, dry cloth. If you are going to store your airgun for an extended length of time be sure the barrel is protected. This can be accomplished by coating the bore with RWS Spring Cylinder Oil. Always use a soft cloth and insert the cleaning rod from the breech end on break barrel rifles. Remove the oil completely before the next use. Always check to see if the airgun is "ON SAFE" and unloaded when getting it from another person or from storage.

DO NOT MODIFY YOUR AIR RIFLE

CAUTION: THE COMPONENTS OF YOUR AIRGUN WERE ENGINEERED AND MANUFACTURED TO DELIVER OPTIMUM PERFORMANCE. ANY MODIFICATION OR TAMPERING WITH YOUR AIRGUN MAY CAUSE A MALFUNCTION, WILL VOID YOUR WARRANTY, AND MAY MAKE IT UNSAFE TO USE. ANY CHANGE IN PERFORMANCE (SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL), INDICATES POSSIBLE MODIFICATION, TAMPERING, AND/OR WEAR. SUCH AIRGUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED BY ONLY QUALIFIED UMAREX USA PERSONNEL. ANY AIRGUN THAT HAS BEEN DROPPED SHOULD BE CHECKED BY QUALIFIED PERSONNEL TO ENSURE THAT ITS FUNCTION HAS NOT BEEN AFFECTED.

WARNING: A GUN THAT IS NOT OPERATING PROPERLY MAY BE DANGEROUS. IT SHOULD BE KEPT SAFELY FROM USE BY ANYONE UNTIL REPAIRED OR DESTROYED. DO NOT TRY TO TAKE THE GUN APART. IT IS DIFFICULT TO REASSEMBLE AND IMPROPER DISASSEMBLY OR REASSEMBLY CAN CAUSE SERIOUS INJURY OR DEATH.

AMMUNITION

Your Hammerli Air Rifle is designed to fire caliber .177 or .22 lead pellets only. We recommend the use of RWS Pellets because of their superb accuracy and dimensional uniformity. The correct caliber is clearly stamped on the barrel near the breech block or on the breech block as well as on the barrel underneath the muzzlebrake.

NEVER DRY FIRE YOUR AIR RIFLE

If the air rifle is fired without a lead pellet or RWS Cleaning Pellet in the breech, it will cause the piston to bottom out in the cylinder which can permanently damage the air rifle.

CARE AND MAINTENANCE


CAUTION: BEFORE ANY CARE, CLEANING, OR MAINTENANCE, ALWAYS BE SURE YOUR AIR RIFLE IS "ON SAFE" AND UNLOADED. KEEP IT POINTED IN A SAFE DIRECTION. IT IS IMPORTANT TO MAINTAIN YOUR AIRGUN PROPERLY.

WORKING PARTS: The working parts (piston and mainspring) require very little lubrication. Two(2) drops of RWS Air Chamber Lube every 1000 shots will suffice. It is easily applied through the compression chamber port with a 3 1/2" applicator needle (see illustration 10). The wearing surfaces at the barrel hinge, the cocking arm, and the trigger mechanism should be lubricated with RWS Spring Cylinder Oil (see illustration 11a). Mainsprings should be oiled every 1000 shots with six(6) drops of RWS Spring Cylinder Oil (see illustration 11b). Remember, a little is good—a lot is not better.



illustration 10
BREAK
BARREL

CAUTION: CHECK THE TIGHTNESS OF THE FRONT TRIGGER GUARD AND STOCK SCREWS BETWEEN, DURING, AND AFTER SHOOTING ACTIVITY. LOOSE SCREWS MAY CAUSE INJURY OR DEATH.

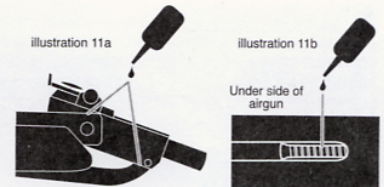

BARREL: In day to day use, very little dirt or residue will accumulate in the bore. This can be removed by using soft RWS Cleaning Pellets. Note: High quality RWS Lead Pellets not only increase accuracy, they help to reduce lead deposit. During periods of regular use the bore of the barrel should be cleaned periodically by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal.

SURFACE: The exposed metal parts (rear sight, receiver, screw heads, sight hood, etc.) are a gun blue finish and MUST be wiped clean using a slightly oiled cloth after handling to prevent rust. Use light acid free and resin free oil. RWS Spring Cylinder Oil is excellent for this.

CAUTION: OILS THAT CONTAIN ACID OR RESIN CAN DAMAGE THE BREECH SEAL, COMPRESSION SEAL, AND POSSIBLY THE FINISH OF THE STOCK.

WARRANTY AND REPAIR

Hammerli Air Rifles have a One (1) Year Limited Warranty. A copy of the original purchase receipt is required for warranty repairs.

Do not return defective or damaged product to the dealer. If your air rifle needs repair, call Umarex USA (479) 646-4210 and ask for the Service Department or visit www.UmarexUSA.com. DO NOT ATTEMPT TO DISASSEMBLE IT! Your airgun requires special tools and fixtures to repair it. Any disassembly or modification not performed by Umarex USA will void the warranty.

UMAREXUSA

6007 South 29th Street, Fort Smith, Arkansas 72908 USA

Phone: 1-479-646-4210 www.UmarexUSA.com

06R07

P000100



! WARNING: THIS AIRGUN IS NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 600 YARDS (548 METERS).

Hammerli maximum velocity and projectile distance:

Model	Caliber	Velocity		Danger Distance
X2	.177 / .22	1100 / 900	FPS	600 yds
Storm	.177 / .22	1000 / 820	FPS	450 yds
Storm Elite	.177 / NA	1000 / NA	FPS	450 yds
Razor	.177 / .22	1000 / 820	FPS	450 yds
Nova	.177 / NA	1000 / NA	FPS	450 yds
Titan	.177 / NA	1000 / NA	FPS	450 yds
Quick	.177 / NA	625 / NA	FPS	425 yds

Hammerli maximum velocity and projectile distance:

Model	Caliber	Velocity		Danger Distance
X2	.177 / .22	1100 / 900	FPS	600 yds
Storm	.177 / .22	1000 / 820	FPS	450 yds
Storm Elite	.177 / NA	1000 / NA	FPS	450 yds
Razor	.177 / .22	1000 / 820	FPS	450 yds
Nova	.177 / NA	1000 / NA	FPS	450 yds
Titan	.177 / NA	1000 / NA	FPS	450 yds
Quick	.177 / NA	625 / NA	FPS	425 yds

! WARNING: THIS AIRGUN IS NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 600 YARDS (548 METERS).

UMAREXUSA® 6007 South 29th Street
Fort Smith, Arkansas 72908 USA — www.UmarexUSA.com

Term of this warranty on stated on the reverse side of the card.
effective from the date of purchase as a new product.



In order to qualify for warranty cover the warrenty card must be completed within 4 weeks of the date purchase.
and a copy of the sale reciept

Exemption from Cover:

Warranty does not extend to seals or other components subject to wear as a consequence of use, including the stock

Warranty will be Invalidated if:

1. Warranty card is not fully completed and returned to Armex Ltd
2. Any Attempt has been made to remove the tamper-prof inserts.
3. The Rifle, Pistol, Bow or Crossbow has been dismantled other than by an Armex engineer.
4. Non-Standard repair parts have been fitted.
5. The fault was demonstrably caused by neglect or abuse

* In the unlikely event that an item cannot be repaired, you shall be informed by a member of the Armex team and instructed to contact your location of purchase.

* Spare parts are subject to availability

* Refunds cannot be issued to members of the public by Armex Ltd.

In the unlikely event of a warranty claim the unloaded/depressurised item should be returned to us at the address below.
Together with a description of the fault and a copy of purchase invoice. Please remember to enclose a contact number and return address. In the event of the claim not being subject to warranty cover we will advise of the nature and cost before any work will be carried out

Armex Ltd, Field Sports House, 11 Andover street, Birmingham, West Midlands, B5 5RG. Tel 0121 643 4900